

IMPORTANT SAFEGUARDS

When using your Slow Cooker, basic safety precautions should always be followed, including the following:

- Do not touch hot surfaces. Use handles.
- To protect against electric shock, do not immerse the product, cord or plug in water or other liquids.

- Close supervision is necessary when any appliance is used by or near children.

- Unplug the appliance from the outlet when not in use and before cleaning. Allow appliance to cool before putting on or taking off parts and before cleaning appliance.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunction, or has been damaged in any manner. Return to an authorized service station for examination, repair or electrical or mechanical adjustment. You can locate the nearest service center by calling 1-800-334-0759.

- Do not use outdoors.

- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Use extreme caution when moving the appliance if it contains hot oil or any other hot liquid.
- Do not use appliance for anything other than its intended use.

THIS UNIT IS FOR HOUSEHOLD USE ONLY

EXTENSION CORD USE

A short power-supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over unintentionally.

SAVE THESE INSTRUCTIONS

P.N. 115845



MODEL/MODELO
MODÈLE **7660**

Cocotte mijoteuse

Slow Cooker

User Manual

Manual de Instrucciones




UTILIZAR SU CACEROLA DE COCCIÓN LENTO DE OSTER®

- Antes del primer uso, lave el gres a fondo en agua caliente, jabonosa; enjuague y seque. **Nota:** No sumerja la Cacerola de Cocción Lento en agua.
- Seleccione un lugar para la Cacerola de Cocción Lento. El lugar debe ser un área abierta con un mostrador plano donde el enchufe alcance a un tomacorriente.
- Prepare la receta según las direcciones. Coloque en el gres.
- Coloque el gres en la base de la Cacerola de Cocción Lento. Las manijas del gres deben alinearse con las manijas de la base.
- Enchufe el cordón en un tomacorriente de 120 voltios.

La unidad se puede encender:

1. Seleccionando el botón de control deseado (*Carnes asadas, Estofados/Sopas, Pescado/Aves, Salsas/Postres*) y presionando el Botón de Arranque. El tiempo de cocción está preestablecido para estas graduaciones. La unidad emitirá un pitido cuando se presionen los botones de control y de Arranque. Para las recetas que no están en estas categorías, por favor refiérase a la receta o al libro de cocina para direcciones sobre los ajustes de temperatura y de tiempo.
2. Seleccionando el ajuste Alto/Bajo de temperatura y graduando el tiempo de cocción utilizando las flechas hacia arriba o hacia abajo. Las recetas recomiendan típicamente si utilizar el ajuste de temperatura baja o alta, sin embargo, el ajuste se puede regular basado en el tiempo de cocción disponible. Usted puede utilizar las flechas hacia arriba o hacia abajo para aumentar o disminuir el tiempo de cocción. El ajuste Alto se puede ajustar para cocinar por un mínimo de 1 hora hasta un máximo de 6 horas (*el tiempo predeterminado es 2 horas*). La graduación del punto bajo se puede ajustar para un mínimo de 6-1/2 horas hasta un máximo de 20 horas (*el tiempo predeterminado es 6-1/2 horas*). La unidad emitirá un pitido cuando las flechas arriba y abajo se presionan **Nota:** Una hora en Alto es igual a aproximadamente poco más de dos horas en Bajo.
3. Seleccionando manualmente el botón de Mantener Tibio para activar inmediatamente. **Nota:** La función de Mantener Tibio se activará automáticamente por hasta 6 horas al final del ciclo de cocción preestablecido. Presione Parar (Stop) para apagarla manualmente. La unidad emitirá un pitido cuando se presione el botón de Mantener Tibio.
- Coloque la tapa encima del gres durante la cocción. **Nota:** Durante la cocción la parte de vidrio puede estar caliente. Toque solamente la perilla de la tapa.
- Cuando el ciclo de cocción está completo, la unidad emitirá un pitido. Usted puede terminar manualmente el ciclo presionando "STOP" (Parar). La unidad emitirá un pitido.
- Quite los alimentos del gres, o utilice el gres como plato de servir levantando el gres fuera de la base por medio de las manijas. Use guantes de horno al elevar el gres fuera de la base.
- El gres se puede utilizar para almacenar alimentos en el refrigerador.

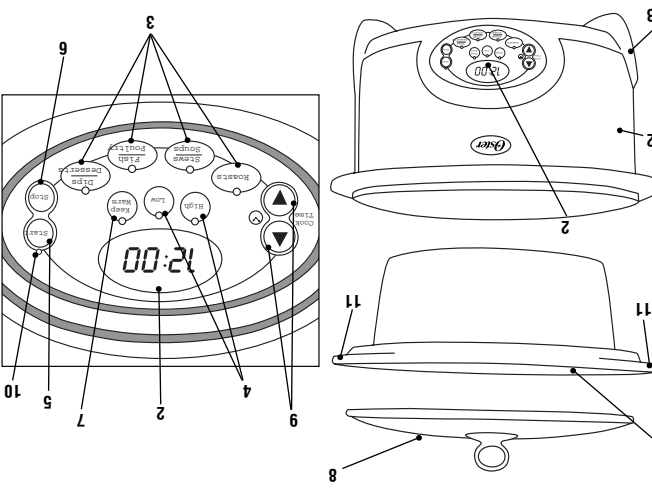

FEATURES OF YOUR SLOW COOKER

1. 6-Quart Stainless Steel Housing

2. LCD Screen - Displays the programmed cooking time.

3. Easy, One-Touch, Pre-Programmable Settings - Select from Roasts, Stews/Soups, Fish/Poultry and Dips/Desserts.

4. Low/High Temperature Controls - Select the desired cooking temperature.

5. Start Button - Starts the cooking process.

6. Stop Button - Stops the cooking process.

7. Auto Keep Warm Function - Automatically shifts to Keep Warm setting when cooking cycle is complete (6 hours). You may also manually activate the Keep Warm Function.

8. Temperature Resistant Glass Lid - Safe for the dishwasher.

9. Cook Time Increase/Decrease Timer - Allows you to increase or decrease cooking time as desired in 30 minute increments.

10. Power Indicator Light - Indicates that Slow Cooker is plugged in and cooking time.

11. COOL-TOUCH™ Handles - The High setting may be set to cook for a minimum of 1 hour up to a maximum of 6 hours (*default time is 2 hours*). Low setting may be set for a minimum of 6-1/2 hours up to a maximum of 20 hours (*default time is 6-1/2 hours*). The unit will beep when the up or down arrows are pressed.

12. Stainless Steel Housing


13. Wrap Around Heating Element - Heats foods evenly and thoroughly.

BIENVENIDO

¡Felicitaciones por su compra de una Cacerola de Cocción Lento de OSTER®! Para averiguar más sobre los productos OSTER®, por favor visítenos en www.oster.com.

CARACTERÍSTICAS DE SU CACEROLA DE COCCIÓN LENTO

1. **Tazón de 6.5 cuartos desprendible, no se pega, de cerámica de gres, lavable a máquina** – Para servicio de la encimera a la mesa.
2. **Pantalla de Cristal Líquido** – Muestra el tiempo de cocción programado.
3. **Graduación Fácil de un Toque Pre-Programable** – Seleccione las Carnes Asadas, Estofados/Sopas, Pescado/Aves y Salsas/Postres.
4. **Controles de Temperatura Baja/Alta** – Presionando estos botones seleccione la temperatura de cocción que usted desea.
5. **Botón de Inicio "Start"** – La unidad comenzará a cocinar cuando presione este botón.
6. **Botón de Parada "Stop"** – Presionando este botón se parará el proceso de cocción.
7. **Función de Auto Mantenerse Tibia** – Automáticamente cambia a la graduación Mantenerse Tibia al completarse el ciclo de cocción (6 horas). Usted puede también activar manualmente la Función de Mantener Tibio.
8. **Tapa de Vidrio Resistente a la Temperatura** – Segura para el lavaplatos.
9. **Contador de Tiempo de Incremento/Disminución del Tiempo de Cocción** – Le permite aumentar o disminuir el tiempo de cocción según lo deseado en incrementos de 30 minutos.
10. **Luz Indicadora de Alimentación** – Indica que la Cacerola de Cocción Lento está enchufada adentro y que el contador de tiempo está ajustado para comenzar a cocinar.
11. **Manijas Frescas al Tacto (COOL-TOUCH™)**
12. **Alojamiento de Acero Inoxidable**
13. **Elemento de Calentamiento Envoltivo Alrededor** – Calienta los alimentos uniformemente y a fondo.

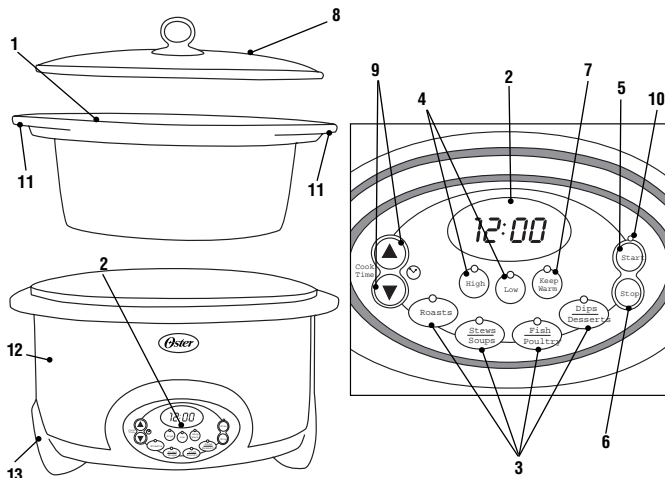

- Before first use, wash Removable Stoneware Bowl thoroughly in hot, soapy water; rinse and dry. **Nota:** Do not immerse the Slow Cooker in water.
- Place Removable Stoneware Bowl in Slow Cooker base. Handles of the Stoneware Bowl.
- Prepare recipe according to directions. Place ingredients in Removable Stoneware Bowl when the plug will reach an outlet.
- Select a location for the Slow Cooker. The location should be an open area on a flat counter where the plug will reach an outlet.
- Plug the cord into a 120 volt electrical outlet.
- If the completed dish has too much liquid, remove the lid and set the Slow Cooker on High until some liquid has evaporated.
- While browning meat prior to Slow Cooking is not necessary, it may improve the color of the meat.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.

GUIDE TO SLOW COOKING

- For best results, follow these guidelines when using your Slow Cooker: To wash the Removable Stoneware Bowl and lid, remove components from food particles that are stuck to the side, allow Removable Stoneware Bowl to soak in warm water before washing.
- To clean the base of the Slow Cooker, wipe outer housing with a damp cloth. **DO NOT IMMERSE IN WATER!** Use only mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the unit.
- Certain foods should not be cooked for a long time. Foods such as dairy products, pastas and rice should be added to the Slow Cooker during the last two hours of the cooking cycle.
- The Removable Stoneware Bowl can be used to store food in the refrigerator. Wear oven mitts when lifting the Removable Stoneware Bowl out of base.
- Remove food from Removable Stoneware Bowl, or use it as a serving dish and the cycle by pressing "STOP". The unit will beep.
- When the cooking cycle is complete, the unit will beep. You may manually cooking the glass portion of the lid may be hot. Only touch the lid knob.
- Place lid on top of Removable Stoneware Bowl during cooking. **NOTE:** During preset cooking cycle, Press Stop to manually turn it off. The unit will beep when the Keep Warm button is pressed.

- Manually select Keep Warm button to activate immediately. **NOTE:** The Keep Warm function will activate automatically for up to 6 hours at the end of a preset cooking cycle. Press Stop to manually turn it off. The unit will beep when the Keep Warm button is pressed.
- Select High/Low temperature setting and set cooking time using the up or down arrows. Recipes typically recommend whether to use the Low or High temperature setting, however, the setting can be adjusted based on the available cooking time. You can use the up or down arrows to increase or decrease the cooking time. The High setting may be set to cook for a minimum of 1 hour up to a maximum of 6 hours (*default time is 2 hours*). Low setting may be set for a minimum of 6-1/2 hours up to a maximum of 20 hours (*default time is 6-1/2 hours*). The unit will beep when the up or down arrows are pressed.

3. Manually select Keep Warm button to activate immediately. **NOTE:** The Keep Warm function will activate automatically for up to 6 hours at the end of a preset cooking cycle. Press Stop to manually turn it off. The unit will beep when the Keep Warm button is pressed.

2. Select High/Low temperature setting and set cooking time using the up or down arrows. Recipes typically recommend whether to use the Low or High temperature setting, however, the setting can be adjusted based on the available cooking time. You can use the up or down arrows to increase or decrease the cooking time. The High setting may be set to cook for a minimum of 1 hour up to a maximum of 6 hours (*default time is 2 hours*). Low setting may be set for a minimum of 6-1/2 hours up to a maximum of 20 hours (*default time is 6-1/2 hours*). The unit will beep when the up or down arrows are pressed.

1. Selecting desired control button (*Roasts, Stews/Soups, Fish/Poultry, Dips/Desserts*) and push the Start button. The unit will beep when the control and Start buttons are pushed. The unit will beep when the control and Start buttons are pushed.

7. Auto Keep Warm Function - Automatically shifts to Keep Warm setting when cooking cycle is complete (6 hours). You may also manually activate the Keep Warm Function.

8. Temperature Resistant Glass Lid - Safe for the dishwasher.

9. Cook Time Increase/Decrease Timer - Allows you to increase or decrease cooking time as desired in 30 minute increments.

10. Power Indicator Light - Indicates that Slow Cooker is plugged in and cooking time.

11. COOL-TOUCH™ Handles - The High setting may be set to cook for a minimum of 1 hour up to a maximum of 6 hours (*default time is 2 hours*). Low setting may be set for a minimum of 6-1/2 hours up to a maximum of 20 hours (*default time is 6-1/2 hours*). The unit will beep when the up or down arrows are pressed.

12. Stainless Steel Housing

13. Wrap Around Heating Element - Heats foods evenly and thoroughly.

- No lo coloque sobre o cerca de una hornilla caliente de gas o eléctrica ni en un horno caliente.

- Utilice precaución extrema al mover el artefacto si contiene aceite caliente o cualquier otro líquido caliente.

- No use el artefacto para funciones que no sean las concebidas.

ESTA UNIDAD ES SÓLO PARA USO DOMÉSTICO

USO DEL CORDÓN DE EXTENSIÓN

Se proporciona un cordón corto de suministro de energía para reducir el riesgo de que un cordón más largo pueda enredarse o causar un tropezón. Se puede usar un cordón de extensión si se tiene cuidado al usarlo. Si se utiliza un cordón de extensión, la graduación eléctrica del cordón deberá ser por lo menos tan alta como la graduación eléctrica del artefacto.

Se debe arreglar el cordón de extensión de tal modo que no cuelgue sobre la encimera o el tablero de la mesa donde pueda ser tirado por los niños o causar tropezones accidentalmente.

GUARDE ESTAS INSTRUCCIONES

Before cleaning your OSTER® Inspire Slow Cooker, allow the unit to cool, then:

CLEANING YOUR SLOW COOKER

Heat Setting		Recipe or Food	
High	3 - 4 Hours	3 - 4 lb. Chicken	6 - 8 Hours
	4 - 5 Hours	3 - 4 lb. Pot Roast	6 - 8 Hours
	4 - 5 Hours	3 Qt. Beef Stew	8 - 10 Hours
	4 - 5 Hours	3 Qt. Chili	8 - 10 Hours
	4 - 5 Hours	3 Qt. Vegetable Soup	6 - 8 Hours

BASIC COOKING TIME GUIDE

- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- Little or no stirring is required when using the Low or Keep Warm settings. When using the High setting, stirring ensures even flavor distribution.
- When using the High setting, stirring ensures even flavor distribution.
- Little or no stirring is required when using the Low or Keep Warm settings.
- For optimum results, the last ingredients to be added to the Slow Cooker should be liquids and sauces.
- To thicken a casserole set the Slow Cooker on High and mix in a thickening agent, such as flour and water. Allow it to simmer until thickened.
- When making a casserole with meat, lightly coating the meat in flour and browning it before adding to the Slow Cooker may help to seal in the juices.

